3 Enjoy

Start playback

1. Press **OPEN/CLOSE** ⏏ on the front of the recorder, load in a disc and close the disc tray.
2. Press **DISC MENU** (MENU) and use **up** (CH+) or **down** (CH-) keys to select a title.
3. Press **PLAY** (▶) to start playback.
4. To stop playback, press **STOP** (■).

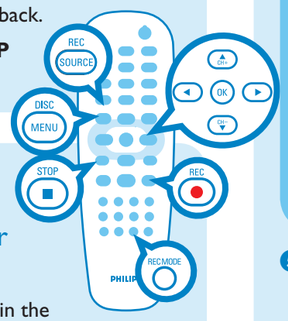

Start Recording

Recording from the TV or an external device

1. Insert a recordable DVD disc in the tray.
2. Press **REC SOURCE** ◯ repeatedly to select the source to record from. (eg, TUNER, CAM1, DV, EXT1 or EXT2).

- **To record a TV programme**, use **up** (CH+) or **down** (CH-) keys to scroll through the channels, or press (0) **-** (9) to select the channel that you want to record.

Recording from the TV or an external device (continued)

3. Press **REC MODE** ◯ repeatedly to select the recording mode.

Record Quality	Hours of Recording that can be stored
	4.7 GB DVD±R/±RW disc
High Quality HQ	1
Standard Play SP	2
Extended Play EP	4
Super Long Play SLP	6

Types of discs for recording

DVD+RW · DVD+R · DVD-RW · DVD-R

5. Press **REC** (●) to start recording, press **REC** (●) again to automatically record 30 minutes.
6. To end recording, press **STOP** (■). 'UPDATE' will be displayed on the recorder.
7. To playback the recording, press **DISC MENU** (MENU), select the title and press **PLAY** (▶).

Need help?

User Manual
See the user manual that came with your Philips recorder.

Online
Go to www.philips.com/support.

Be responsible
Respect copyrights

2006 © Koninklijke Philips N.V.
All rights reserved.

12 NC 3139 245 26261
www.philips.com

Quick Start Guide

1 Connect
2 Set up
3 Enjoy

What's in the box?



DVD Player/ Recorder

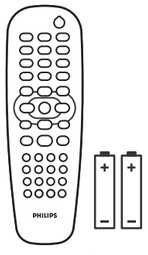

Remote Control and 2 batteries

RF Coaxial Cable

SCART Cable

User Manual

PHILIPS

1 Connect

Start with the 'Basic Connection.'
If you have a VCR, follow the instructions for 'Connection with a VCR or similar device'.

Basic Connection

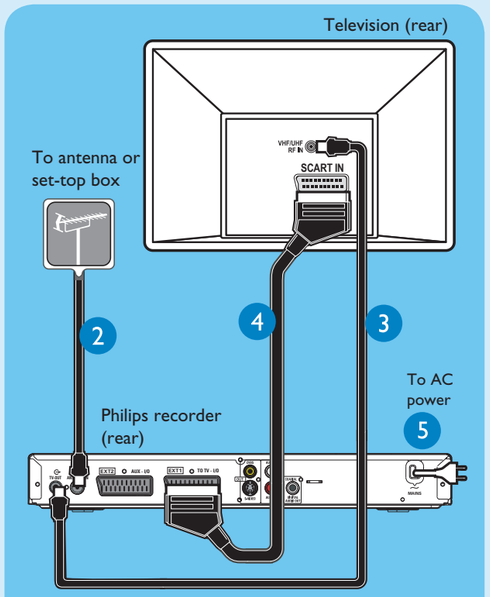

1. Before connecting, unplug the antenna cable that is currently connected to your TV.
2. Connect the antenna cable to the **ANTENNA-IN** jack on the recorder.
3. Use the supplied RF coaxial cable to connect the **TV-OUT** jack on this recorder to the Antenna In jack on the TV.
4. Use the SCART cable to connect the **EXT1 TO TV-I/O** socket on this recorder to the corresponding SCART input socket on the TV.
5. Connect the power cable from the recorder to an AC power outlet.

Connection with a VCR or similar device

A Before Connecting

Your new Philips recorder replaces the VCR for your recording needs. First, unplug all the connections from your VCR.

B Connecting

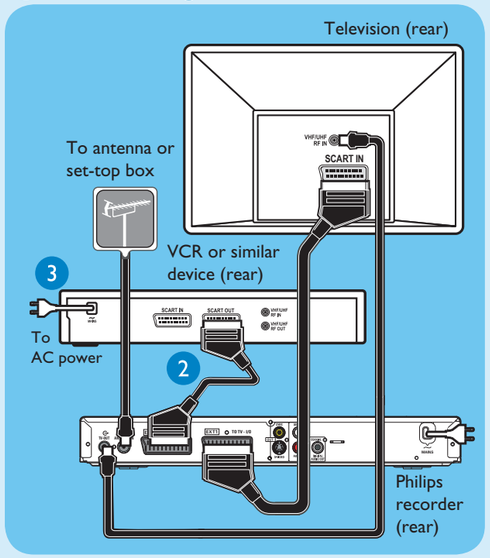

1. Follow the steps under 'Basic Connections' before you proceed to step 2 below.
2. Use another SCART cable (not supplied) to connect the **EXT2 AUX-I/O** SCART socket on this recorder to the SCART OUT socket on the VCR.
3. Connect the power cable from your VCR to an AC power outlet.

Note In this setup, the VCR cannot record TV programmes.

For additional connection diagrams, see the accompanying User Manual.

2 Set up

A Finding the viewing channel

1. Press **STANDBY-ON** on the recorder.
2. Switch on the TV set.

Note If connected to your VCR, make sure it is switched off or in standby mode before proceeding.

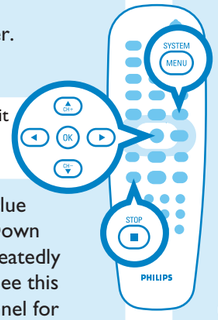

3. In case you do not see the recorder's blue wallpaper, press "0" and the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, button) until you see this screen. This is the correct viewing channel for the recorder.

B Initial Installation

1. Press **SYSTEM MENU** (MENU) on the remote control.

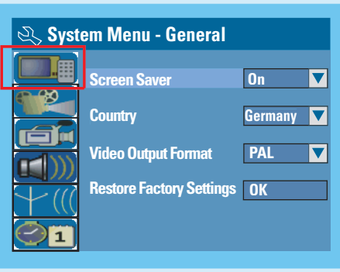

Note Use **up** (CH+) or **down** (CH-) keys to toggle through the options. Select an item by pressing **right** (▶). To confirm a setting, press **OK** (OK).

2. Select the country of your residence.
   - Highlight and press **right** (▶). Select { **Country** } and press **right** (▶) to access the options. Press **OK** (OK) to confirm your selection.
3. Select the OSD language.
   - Highlight and press **right** (▶). Select { **On-Screen Display Language** } and press **right** (▶) to access the options. Press **OK** (OK) to confirm your selection.
4. Setup and install TV channels.
   - Highlight and press **right** (▶). Select { **Channel Search** } and press **OK** (OK) on the remote control to start automatic TV channel search.
5. Setting the date and time.
   - Highlight and press **right** (▶). Select { **Date (dd/mm/yy)** } or { **Time (hh/mm/ss)** } and press **OK** (OK). Use the **numeric keypad 0** (0) **-9** (9) to input the date/time, then press **OK** (OK) to confirm.

Note The settings will be updated according to the broadcast channel information of preset Programme Number 1.

6. Press **SYSTEM MENU** (MENU) to exit.